

# Selection Guide

## Serena® Remote-Controlled Shades

Residence: \_\_\_\_\_ Room: \_\_\_\_\_ Window(s): \_\_\_\_\_

### Step 1 Select Shade Style


**Honeycomb**

**Roller**


Headrail without fascia

Fabric-wrapped fascia (regular roll only)

**Roll orientation**



**Regular –**  
fabric closest  
to the glass  
(standard).



**Reverse –**  
fabric farthest  
from the glass.  
Recommended  
to clear door or  
window hardware.

### Step 2 Select Power

Battery-powered

Plug-in

Cordless Manual Shade

### Step 3 Select Shade Control

**RF Control**

**Single group Pico® –**  
for controlling  
one group  
of shades in  
a space.

**4-group –**  
for controlling  
4 separate  
groups of  
shades in  
a space.

**No control required**

### Step 3a Select Color and Accessories for the Pico Control (if applicable)

White Qty: \_\_\_\_\_  
 White/Gray Qty: \_\_\_\_\_  
 Ivory Qty: \_\_\_\_\_  
 Light Almond Qty: \_\_\_\_\_  
 Black Qty: \_\_\_\_\_

Single tabletop pedestal  
 Dual tabletop pedestal  
 White Qty: \_\_\_\_\_  
 Black Qty: \_\_\_\_\_

Pico wall adaptor kit  
(for use with Claro®  
wallplates)  
Qty: \_\_\_\_\_

Single gang wallplate Qty: \_\_\_\_\_  
 2-gang wallplate Qty: \_\_\_\_\_  
 3-gang wallplate Qty: \_\_\_\_\_  
 4-gang wallplate Qty: \_\_\_\_\_

Select wallplate color:  
 White  
 Ivory  
 Light Almond  
 Black


## Step 4

## Shade Mount and Measurements (Choose one)

### Inside Mount


#### Roller shade

3<sup>3</sup>/<sub>8</sub>" (86 mm)

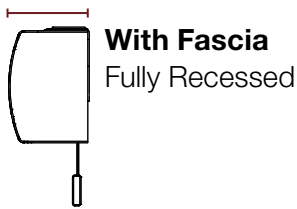

**With Fascia**  
Fully Recessed


3<sup>1</sup>/<sub>8</sub>" (80 mm)

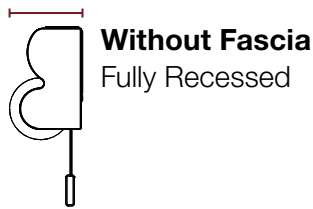

**Without Fascia**  
Fully Recessed

#### Honeycomb shade


2<sup>1</sup>/<sub>2</sub>" (64 mm)

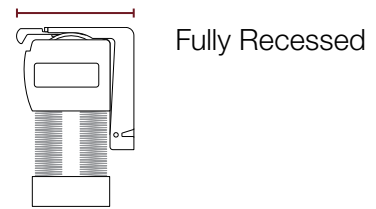

Fully Recessed

Please note: For partial recess, the location of the mounting screw is 0.5" (13 mm) in from the back of the bracket for roller shades and .75" (19 mm) for honeycomb shades.

#### Width:

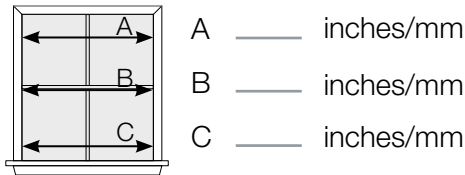


A \_\_\_\_\_ inches/mm

B \_\_\_\_\_ inches/mm

C \_\_\_\_\_ inches/mm

Smallest width: \_\_\_\_\_ inches/mm

#### Height:

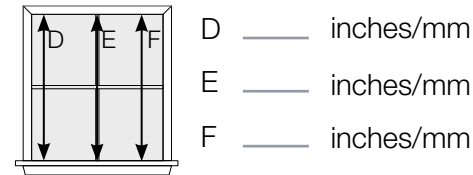

D \_\_\_\_\_ inches/mm

E \_\_\_\_\_ inches/mm

F \_\_\_\_\_ inches/mm

Largest height: \_\_\_\_\_ inches/mm

### Outside Mount on Trim

**Width:** The width of your shades can be as wide as you want, depending on what you want the fabric to cover.

Width: \_\_\_\_\_ inches/mm

### Outside Mount above Trim (includes spacers)

**Height:** Measure from the top of the headrail to the windowsill.

Height: \_\_\_\_\_ inches/mm

Note: If mounting above the trim, we recommend allowing for at least 3<sup>1</sup>/<sub>8</sub>" (80 mm) for honeycomb, 4.5" (114 mm) for roller, of space above the top edge of the window trim for the shade brackets.

## Step 5

## Select Fabric

**Honeycomb**

**Roller**

Fabric P/N: \_\_\_\_\_

For more information, please download **The Lutron Fabric Collections mobile app** at the App Store, or visit [www.lutron.com/serena](http://www.lutron.com/serena).

## Step 6

## Honeycomb Shade Enhancements

### Back Cover

A back cover on the back of the headrail eliminates any light that may come through the mounting area (usually only used on room darkening and on inside mount applications)

For more information, please visit [www.lutron.com/serena](http://www.lutron.com/serena) or call 1(888)445-8063.